


Blueskin® membrane
Air-Bloc 21 or 230-21

Control Joint

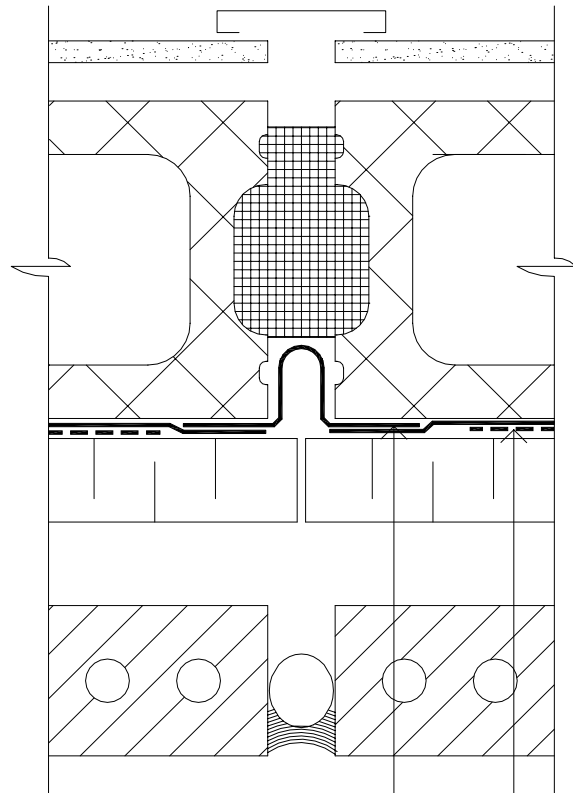

Blueskin® membrane
Air-Bloc 21 or 230-21

Expansion Joint

Notes

1. No special treatment of the air/vapour barrier is required at masonry veneer control joints. Cavity wall compartmentalisation may be achieved using a metal strip extending floor to floor at control joints.
2. Alternatively, use mineral wool insulation or a strip of Blueskin membrane.
3. At expansion joints loop the Blueskin membrane into the opening and lap over both sides.
4. Blueskin is self-sealing when self-taping fastening systems are used.

Blueskin® SA or Blueskin® TG

PLAN DETAILS

BRICK VENEER / CONC. BLK. WALL

Scale: N.T.S.

Plot: 1:5

Issued: 08-14-97

Revision: 06

AB-16B96

BAKOR

375 Pendant Drive, Unit #2,
Mississauga, ON L5T 2W9
10 avenue St. Pierre, Lachine, PQ H8R 1N7