


Brick Veneer
 Air Space
 Insulation
 Air-Bloc 06, 21 or 32
 Concrete Masonry Unit
 Furring
 Gypsum Board

Blueskin® TWF
 Thru-Wall Flashing
 Sheet

Air-Bloc 21

Blueskin® SA
 Transition Sheet

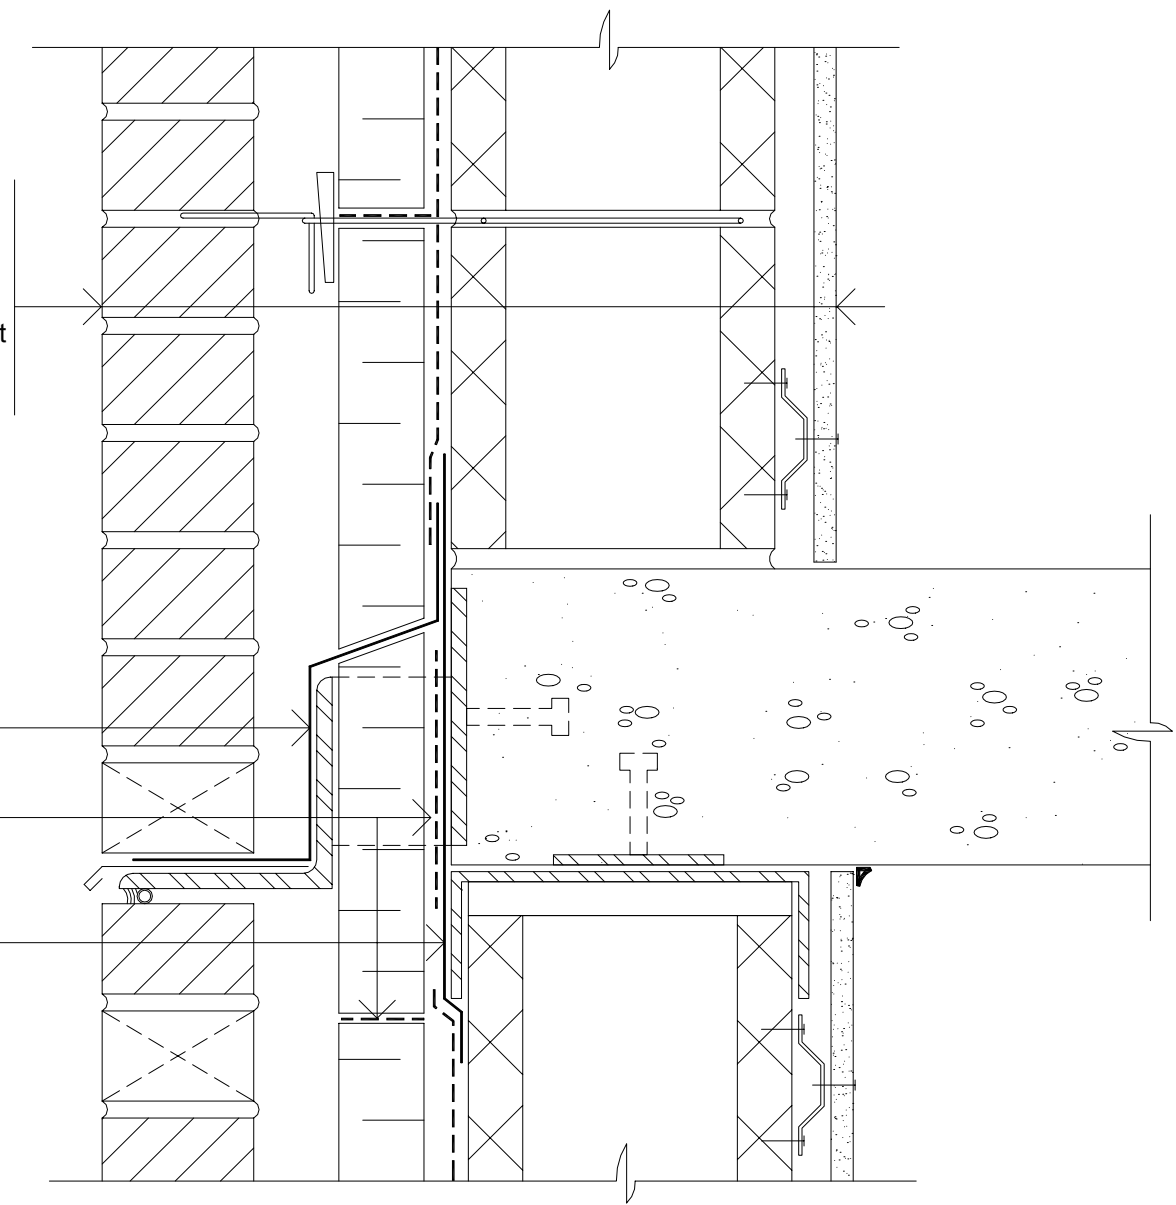

Notes

1. Blueskin TWF is a self-adhering sheet used for thru-wall flashing applications. Blueskin TWF is applied to a prepared and primed substrate.
2. Always stop Blueskin membrane flashing back from exterior face of veneer. Extend the drip edge using prepainted metal to suit.

Air-Bloc 06, 21 or 32

**SHELF ANGLE
 DETAIL**

BRICK VENEER / CONC. BLK. WALL

Scale: N.T.S.

Plot: 1:5

Issued: 08-14-97

Revision: 06

AB-6B96

BAKOR

375 Pendant Drive, Unit #2,
 Mississauga, ON L5T 2W9
 10 avenue St. Pierre, Lachine, PQ H8R 1N7