


Brick Veneer  
 Air Space  
 Insulation  
 Air-Bloc 06, 21 or 32  
 Concrete Masonry Unit  
 Furring  
 Gypsum Board

Blueskin® TWF  
 Thru-Wall Flashing  
 Sheet

Blueskin® SA or TG  
 Dampproof Course

Bakor waterproofing or  
 dampproofing membrane.

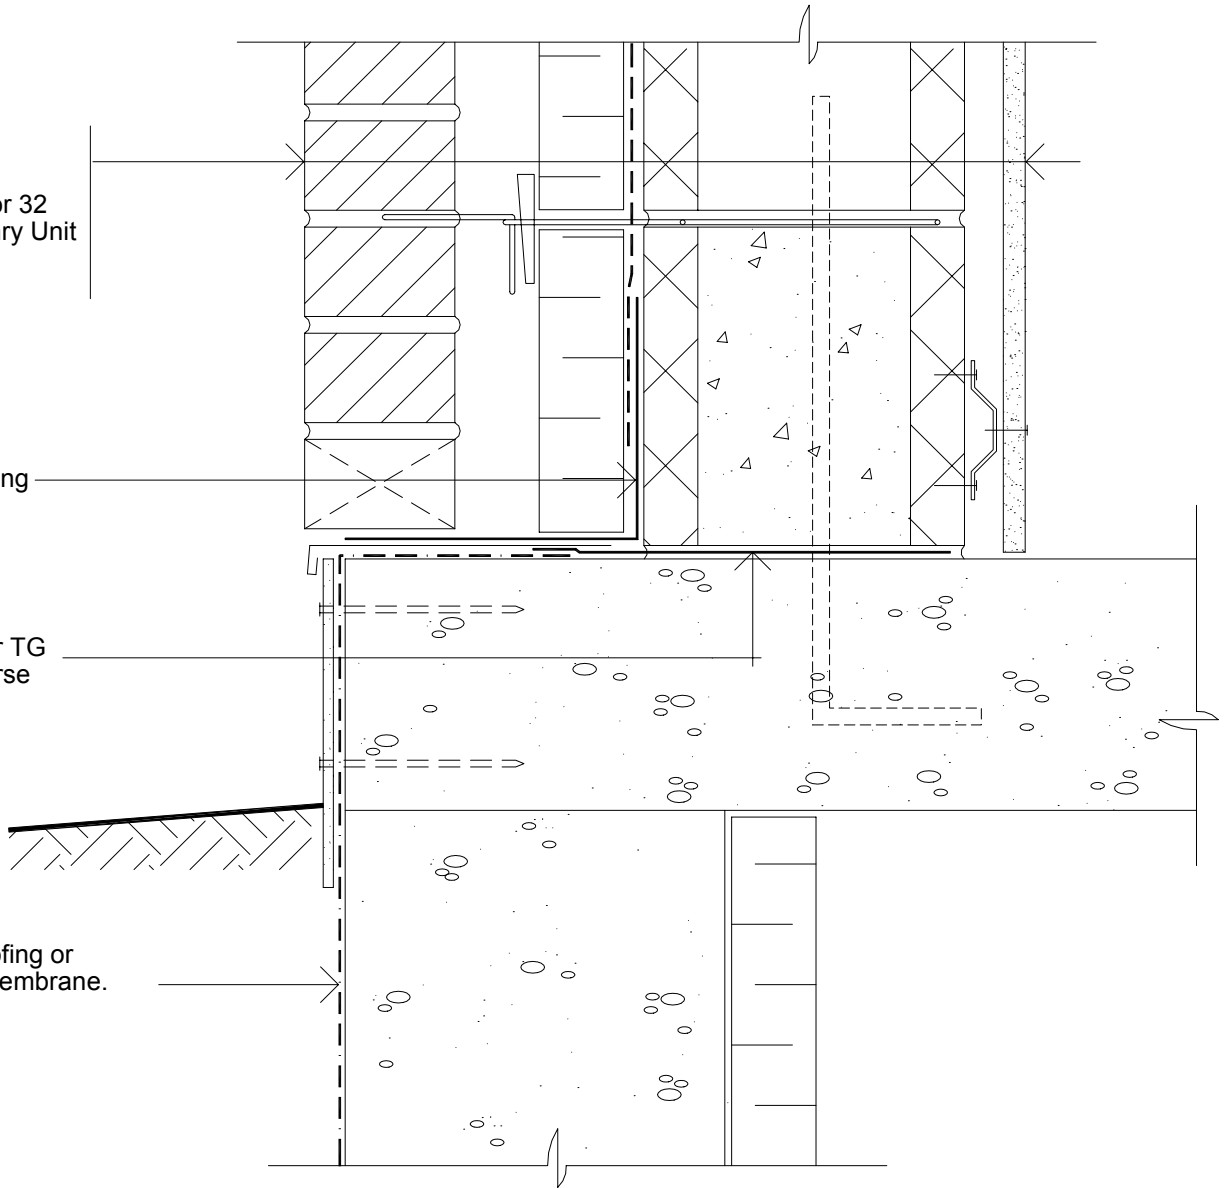

## Notes

1. Wedges may be used as a supplementary attachment method for the insulation.
2. It is recommended that the air/vapour barrier tie into the waterproofing or dampproof membranes.

Air-Bloc 06, 21 or 32

## FOUNDATION DETAIL

BRICK VENEER / CONC. BLK. WALL

Scale: N.T.S.

Plot: 1:5

Issued: 08-14-97

Revision: 06

# AB-9B96

# BAKOR

375 Pendant Drive, Unit #2,  
 Mississauga, ON L5T 2W9  
 10 avenue St. Pierre, Lachine, PQ H8R 1N7